

Using Instruction for FH/FP Series Camcorder External Li-ion Rechargeable Battery



Compatible: NP-FH30/40/50
Voltage: 7.2V/8.4V
Capacity: 1050 mAh
Size: 45.00 x 31.75 x 35.35 (mm)
Package include: Battery & DC cord



Compatible: NP-FH60/70/71
Voltage: 7.2V/8.4V
Capacity: 1500 mAh
Size: 45.00 x 31.75 x 43.35 (mm)
Package include: Battery & DC cord



Compatible: NP-FH100
Voltage: 7.2V/8.4V
Capacity: 2200mAh
Size: 45.00 x 31.75 x 53.50 (mm)
Package include: Battery & DC cord

I. Instruction for FH series Camcorder:

1. Open the "FH" cover of the battery and connect one terminal of the supplied cable to DC output of the battery and indicator turns to green.



2. Install the battery into the camcorder.



3. Connect the other terminal of the cable to the DC input socket of the camcorder, and the camcorder is ready for use



4. Please recharge the battery when the LED indicator light turns to yellow as there is only 10 - 20 mins run time left.



Remark:

- Please take out of the battery from the camcorder when the camcorder is not in use.
- Please keep this instruction sheet for future reference.

II. Instruction for FP series Camcorder:

1. The battery can be used by directly slotting onto the camcorder.
2. It also works if using the cable connection according to the above instruction I.



III. Instruction on battery charging:

1. Open the "Charger" cover, connect one terminal of the cable to "Charger" socket and charge the battery with your original Sony AC-L25A or AC-VQP10 charger. The LED indicator turns to be yellow when charging and it turns off after finishing charging.



2. The battery can be charged by all Sony FP & FH series chargers.

